

WATER COOLING SYSTEMS

The two drain plugs and a pipe cap removed at the factory are in a small bag attached to the carburetor lever. Replace one plug in the bottom of water pump and one in the rear of the manifold near the exhaust flange. Replace the pipe cap on the drain nipple out of the cylinder block water jacket located immediately alongside the distributor.

